



User guide

You'll be up and running in no time.

Safety Information

Please keep this user guide for reference and share it with anyone who uses your Capsule. Failure to adhere to this user guide can lead to personal injury or damage to your Capsule. We accept no liability for damaged caused as a result of failing to adhere to this user guide.

General intended use

- Capsule is intended exclusively for domestic dry vacuuming.
- Store and charge indoors in a dry, cool place out of reach of children.
- Keep the area you are cleaning well lit.
- Do not vacuum wet surfaces or attempt to pick up liquids.
- Do not vacuum where there may be harmful fluids (e.g. chlorine, bleach, drain cleaner).
- Do not vacuum hot coals, cigarette butts, matches or any items that are burning or smoking.
- Do not vacuum hard or sharp objects such as glass, nails, screws, coins etc.
- Do not use on tarmacadam, uneven flooring or other rough surfaces. Uneven stone floors can damage the Power Brush Head and result in damaged carpets.
- Do not use the Power Brush Head if the underside is visibly gouged or damaged.
- Capsule has a highly powered brush head. Never leave the Power Brush Head in one spot for an extended period of time as this may damage the floor surface.
- Switch off the Power Brush Head on delicate surfaces.
- Capsule's high performance may damage delicate surfaces or upholstery. Test on an inconspicuous area first in Eco mode with the Power Brush Head off. Take care on loose-weave fabrics or where there are loose threads.

Personal safety

- Capsule can be used by children aged 12 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided they have been given supervision or instruction concerning the use of Capsule in a safe way and understand the risks involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Take extra care when using Capsule on the stairs. Always clean upwards from bottom to top.
- Keep Capsule away from hot surfaces and elevated ambient temperatures.
- Keep fingers, hair and loose clothing away from moving parts and openings when using Capsule.
- Do not use Capsule if there is visible damage to the appliance or charger, or if Capsule or the charger have been left outdoors or immersed in water.
- Capsule does not stay upright. Between uses, lie flat on the floor in a suitable location so it cannot be stepped on or tripped over.

Electrical safety

- Only use Capsule chargers and spare parts supplied by Halo.
- Never modify the charger in any way.
- The charger has been designed for a specific voltage. Always check that the domestic mains voltage is the same as that stated on the charge rating plate.
- A charger that is matched to one battery pack may cause overheating and risk of fire when used with another battery pack. Always use the approved Capsule charger.
- Before charging always check the charger and cable. Do not use if there are signs of damage or tangling. If there are signs of damage or tangling seek a genuine replacement charger from Halo.
- Never carry the charger by the cord.
- Do not wrap the cord around the charger.
- Do not pull the cord to remove the charger from the socket or from Capsule.
- Do not store or charge Capsule outdoors.
- Always remove the charger when cleaning, emptying or maintaining Capsule.
- Ensure Capsule is switched off before connecting or disconnecting any accessories or the motorised Power Brush Head.

Battery safety

- Capsule includes Li-Ion batteries; do not incinerate batteries or expose to high temperatures as they may explode.
- Leaks from the battery can occur under extreme conditions. Do not touch any liquid leaks. If liquid gets on the skin wash immediately with plentiful soap and water. If liquid gets in eyes flush them immediately with clean water for a minimum of 10 minutes and seek medical attention. Wear gloves to handle the battery and dispose of immediately in accordance with local regulations.
- In an emergency situation contact professional help immediately!
- Shorting charging terminals may cause burns or fire.
- When you dispose of Capsule please do so safely and in accordance with local regulations.
- Keep all openings clear and free from debris as this may impact airflow or suction.
- **WARNING:** For the purpose of recharging the battery only use the detachable power supply unit provided with this appliance

Welcome to Capsule

Thank you for choosing your Halo Capsule cordless vacuum cleaner. We hope you will have many years of use from your Capsule but before you begin please read this user guide completely.



About Halo Capsule

Paul spent 20 years developing vacuum cleaners for big brands. Then he saw that recent improvements in cordless technology could change everything. There was a better way of doing things.

Innovation for the big household names seemed entirely focused on miniaturising old technology; but this was compromising performance, weight and efficiency. People were having to carry around heavy machines with very little capacity – the opposite of what they needed.

Capsule cracks the mould.


Capsule is lighter and hungrier.

Here in the heart of the country – the UK's Motorsport Valley – where Capsule was designed and developed, we know a thing or two about high-speed motors and carbon fibre. Capsule sports the best of this technology and makes nimble, easy work of vacuuming.










Best of British
Design

Patents Pending

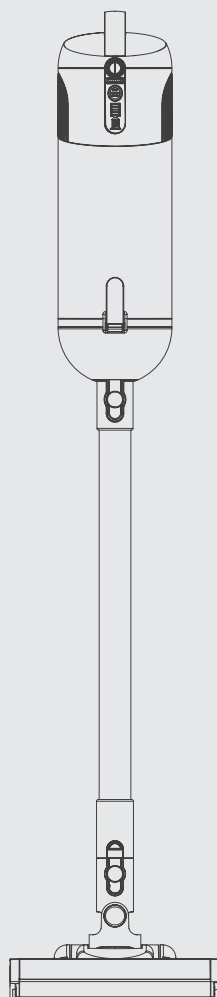

What's in the box



- 1 Capsule Main Unit
- 2 Power Brush Head
- 3 Crevice Tool
- 4 Dusting Brush
- 5 Extension Tube
- 6 Charger
- 7 Pack of Dust Pouches
- 8 Accessory Clip

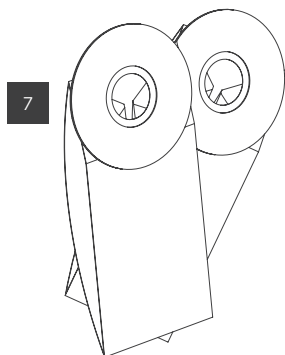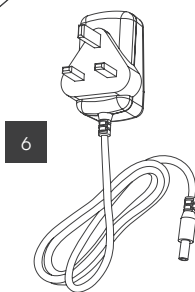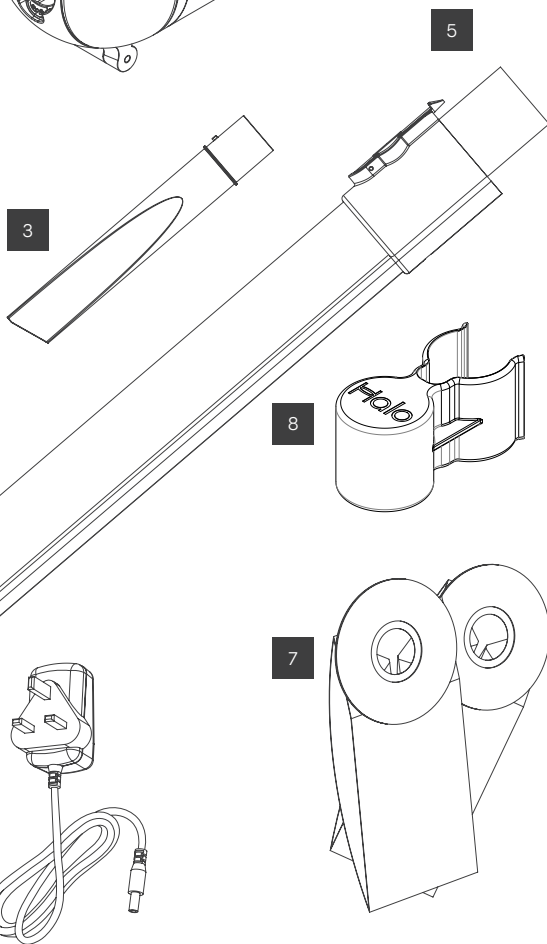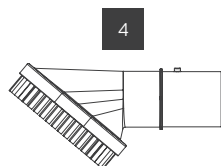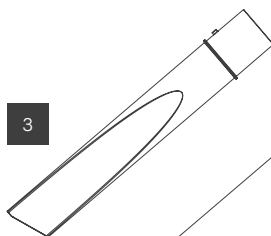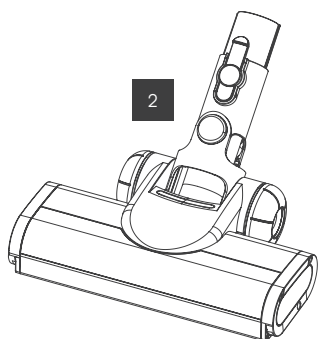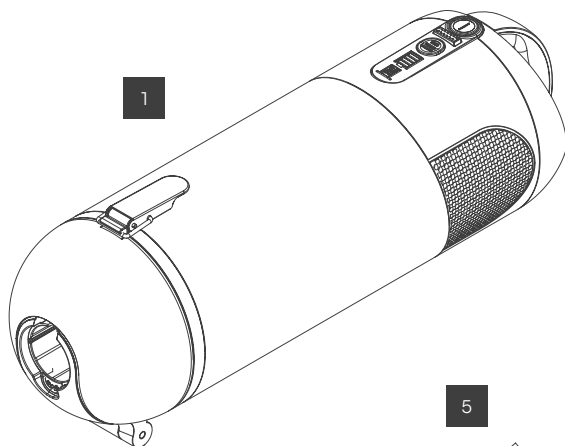

Getting started

Fitting the Dust Pouch


1. Open Capsule by lifting the metal latch. Always remove the Extension Tube and any accessories first.
2. Simply drop the Dust Pouch into the cavity, with the circular card outermost, then reclose.

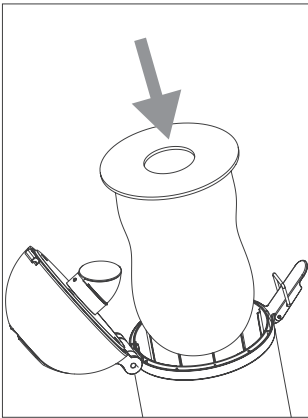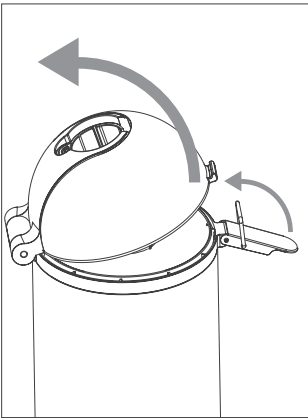


Reclining to Clean

1. Simply recline Capsule while keeping one Foot on the Power Brush Head. There will be an audible click.

Capsule is ready to Clean

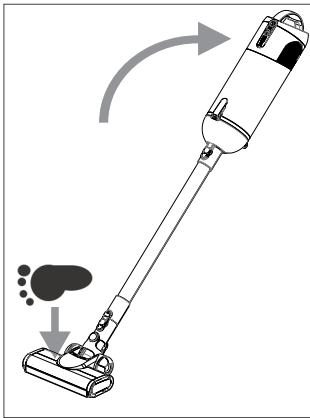

Powering up

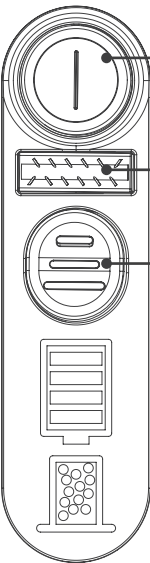



- **Main on/off**
Starts Capsule.
Capsule always starts in Performance mode.
- **Power Brush Head on/off**
Starts the Power Brush Head.
For safety reasons the Power Brush Head, if required, should be started each time Capsule is switched on.
- **Power Volume Button**
To cycle between Eco, Performance and Boost mode.

≡ Eco	≡ Performance	≡ Boost
For longest runtime and good cleaning.	For general cleaning and great performance!	Available for short periods where maximum performance is required.


Attaching the accessories

The accessories can be attached in a variety of ways

1. The Power Brush Head or any of the accessories can be attached to the end of the Extension Tube.
2. Alternatively any of the accessories can be connected directly into the Capsule Main Unit to allow handheld operation.

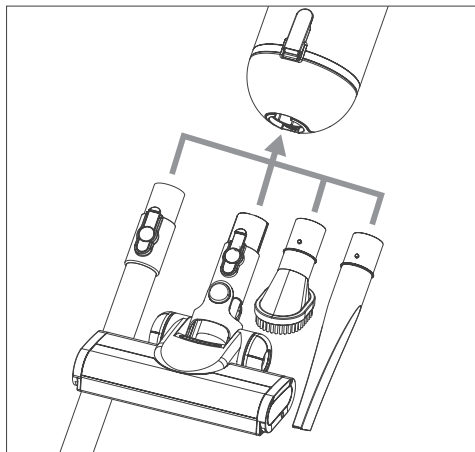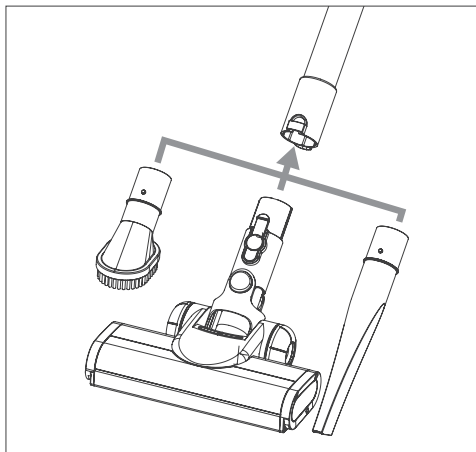


3. Release accessories by either pulling them straight out or, where fitted, depress the retention clip first.

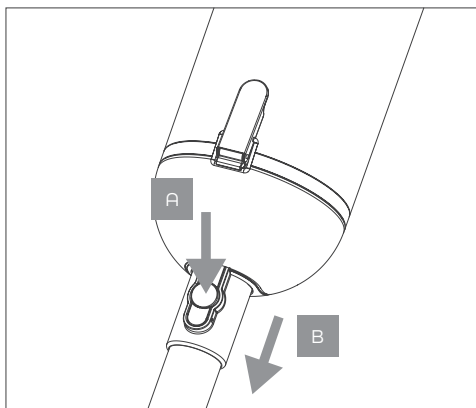

Accessory Clip

4. The accessory clip can be fitted to the top of the extension tube. Simply push the clip onto the tube then insert the chosen accessory. This can then be carried with your Capsule.

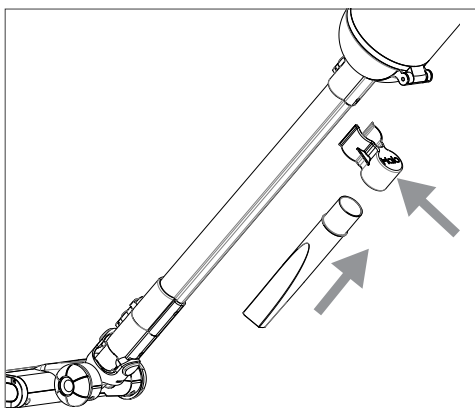

Charging



The charger connects between the Capsule Main Unit and the mains.

Charging Status

Whilst charging, the battery indicator will show the level of charge From 0-100% in 25% increments.

To ensure Full runtime Capsule should be charged for 3-4 hours after each use.

Capsule can be left connected when Fully charged. The charger will enter sleep mode and no electricity will be consumed.

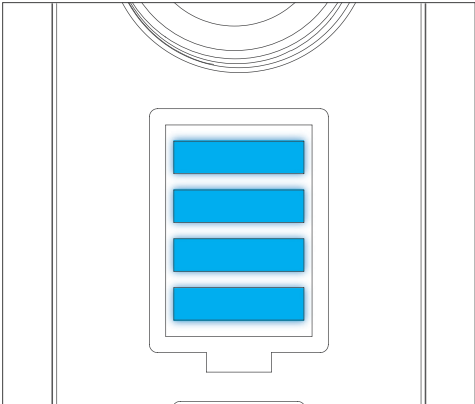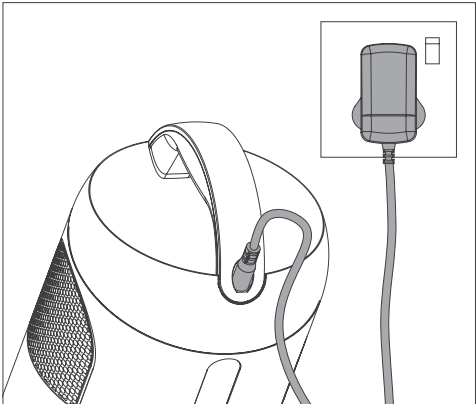

Runtime indicator



The battery indicator will show Fewer bars lit as Capsule is used.

The last bar will Flash red shortly before the battery is exhausted.

Dust Pouch indicator


When the Dust Pouch is Full the indicator will constantly light red.

Change the Dust Pouch at the earliest opportunity to prevent overheating.

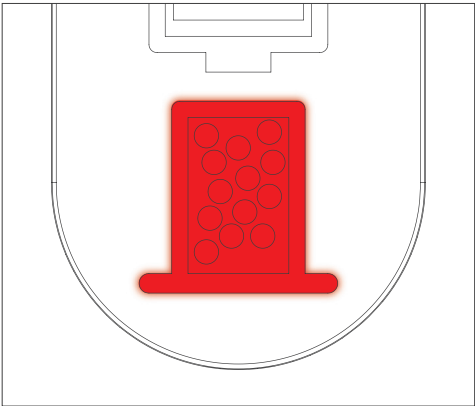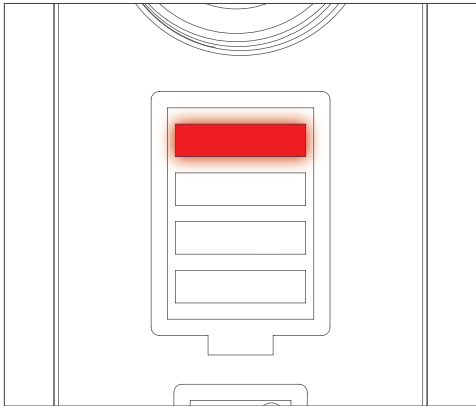


Changing the Dust Pouch


1. Remove the Extension Tube and any accessories then open Capsule by lifting the metal latch.

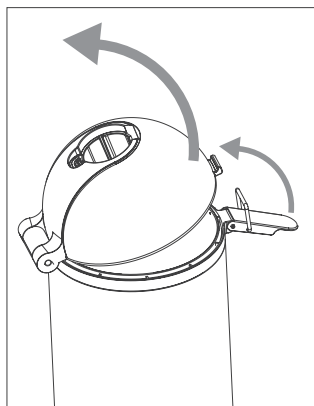

2. Lift the Dust Pouch clear or let it drop under its own weight. Always dispose of Dust Pouches responsibly.

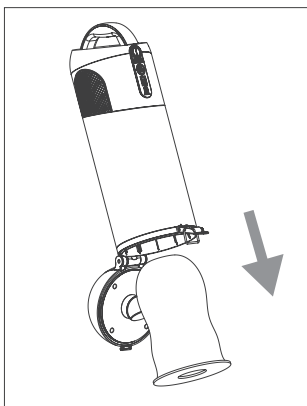


3. Drop a Fresh Dust Pouch into the cavity and reclose. Capsule is ready to clean once more.

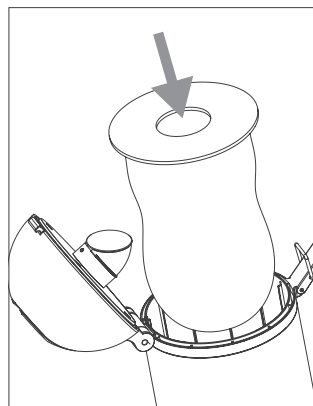


Power Brush Head

Switch the Power Brush button on to start the brushes turning. A green light will appear while in operation.

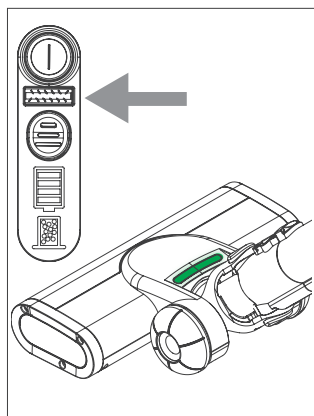


Brush usage

For optimum performance use the Power Brush Head for cleaning carpets and rugs and switch off for hard floor surfaces.

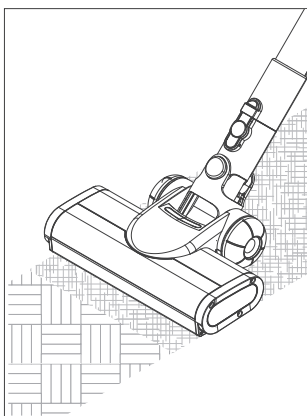

Cleaning Stairs

For stability and convenience the Power Brush Head can be connected directly to the Capsule main unit.

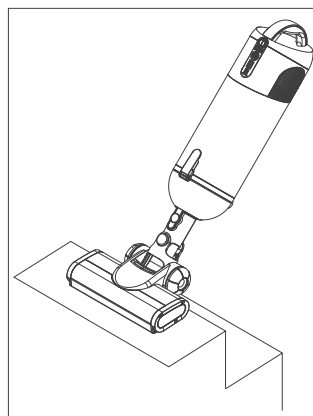

Maintenance

Capsule is designed to be as free from maintenance as possible, but the following can help keep your Capsule in top condition.

Blockages



All vacuums block from time to time. With Capsule most blockages can be fixed by simply changing the Dust Pouch and using Boost mode to suck through any blockages.

In the event this is unsuccessful check the Extension Tube and Power Brush Head for remaining blockages and remove these by hand. The use of sharp tools may damage Capsule and invalidate the warranty.

Power Brush Head

Periodically, hair can become wrapped around the brush roll and should be removed to maintain peak performance.

1. Remove the Power Brush Head from both the Capsule unit and the Extension Tube in order to isolate it from any power source.
2. Unlock the endcap (A) by turning it anticlockwise with a large coin or similar.
3. Turn until the end cap pops out.
4. The brush roll can then be completely removed.
5. Hair can be trimmed clear with a pair of scissors.
6. Ensure all parts are clear of hair and obstructions. Parts should reassemble without being forced.
7. Reinsert brush roll and turn endcap clockwise to secure.

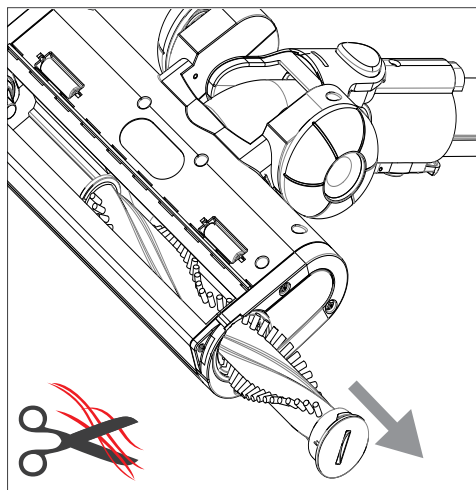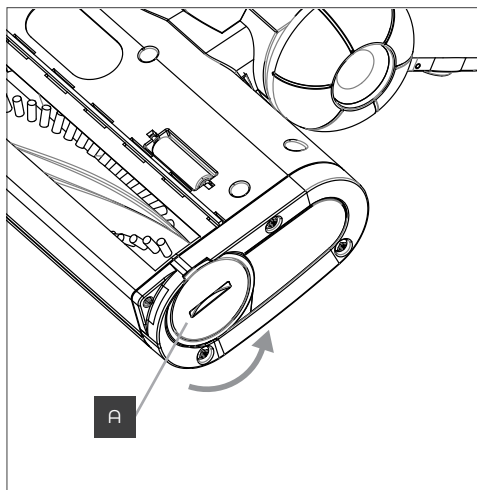

Dust Pouch Filter

After sustained periods of heavy use or if the Dust Pouch has become damaged then the Dust Pouch Filter may need to be cleaned or replaced.


Once the Dust Pouch has been removed the filter can be pulled out of the pouch chamber using the tab shown.

The Filter can be rinsed thoroughly under a tap and then dried for 24 hours before being replaced.

Use of a wet filter will invalidate the warranty. Never use Capsule without the Filter fitted.

Always ensure tab is positioned outward when replacing the Filter.

**If required replacement Filters
can be purchased from:
capsuleclean.com/spares**

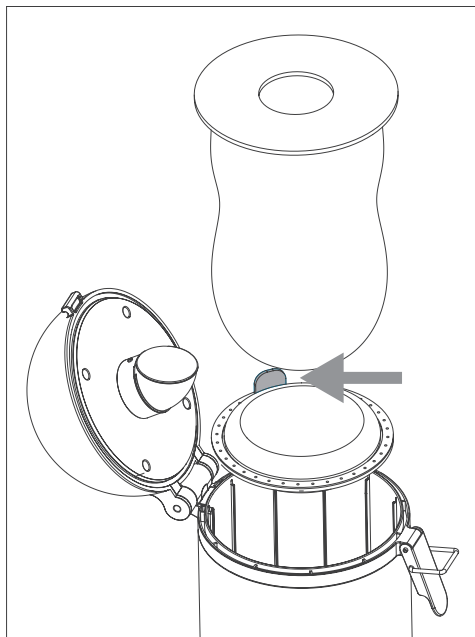

Troubleshooting

Capsule is not cleaning well	<ol style="list-style-type: none">1. Change the Dust Pouch.2. Check For blockages.3. Remove hair From the Power Brush Head.
Capsule won't switch on	<ol style="list-style-type: none">1. Charge the battery.2. Change the Dust Pouch and check For blockages.3. Let Capsule cool for 30 minutes and try again.
If the above does not work please email our UK based contact centre hello@capsuleclean.co.uk where we will be happy to help.	


Indicator lights

In the event of a problem Capsule has a handful of helpful Feedback lights.

Red light on Power Brush Head

Brush is jammed


1. Disconnect the Power Brush Head from the Extension Tube and main body to isolate it from power.
2. Check for blockages.

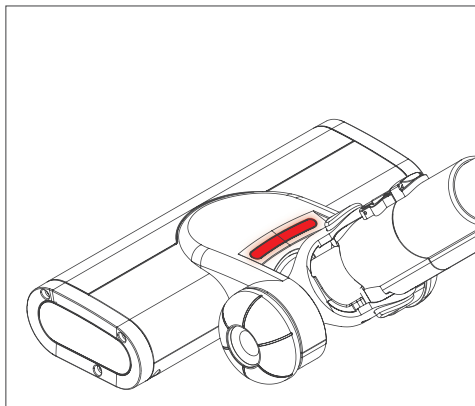

Dust Pouch indicator Flashing

Capsule is hot!


1. Stop using Capsule.
2. Check for blockages.
3. Change the Dust Pouch and charge Capsule.

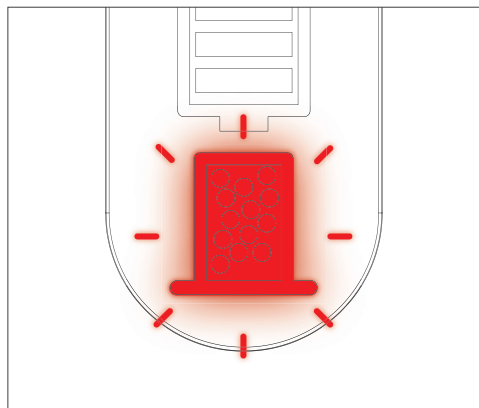

Power Volume indicator Flashing

Capsule motor is jammed

1. Stop using Capsule.
2. Check Filter and Dust Pouch are in place.
3. Fully charge Capsule.
4. If problem persists contact Capsule support hello@capsuleclean.co.uk

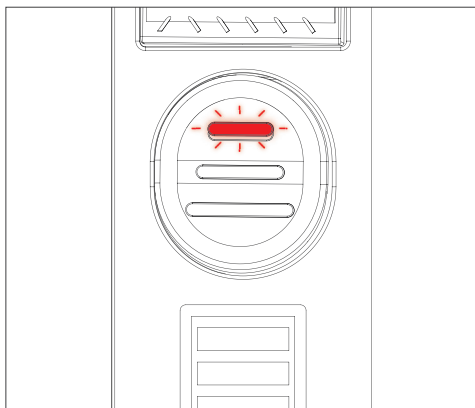

Warranty registration

Your new Capsule comes with a complementary 2-year guarantee.
Your proof of purchase acts as your registration document, please have this to hand if you ever need to contact Halo.

What's covered

- If Capsule is used in the way it is intended and breaks down within the guarantee period it's our responsibility to repair or replace it.

What's excluded

- Normal wear and tear of consumable items, for example belts, filters, Dust Pouches, Power Brush Head etc.
- Batteries or rechargeable batteries which have become faulty or have a reduced life as a result of normal wear or improper handling.
- Accidental damage as a result of:
 - Use not in accordance with the user guide.
 - Not carrying out regular maintenance.
 - Damage to cable.
 - Blockages caused by misuse.
- Faults caused by:
 - Negligent use, misuse, neglect or careless operation of Capsule not in accordance with the user guide.
 - Use of Capsule for anything other than normal domestic purposes in the country it was purchased.
 - Use of parts, accessories and consumables which are not genuine Halo components.
 - Faulty installation or repairs unless carried out by a qualified electrician or engineer.


Capsule technical specification

Voltage	32V
Battery capacity	57.6Wh
Charge time	3 hrs
Run time	Up to 60 mins
Charger output	34.2V DC 700mA


Installing the Wall Dock

1. The Wall Dock should be mounted using the fixings provided.

The Dock should be 95-100cm above the floor.

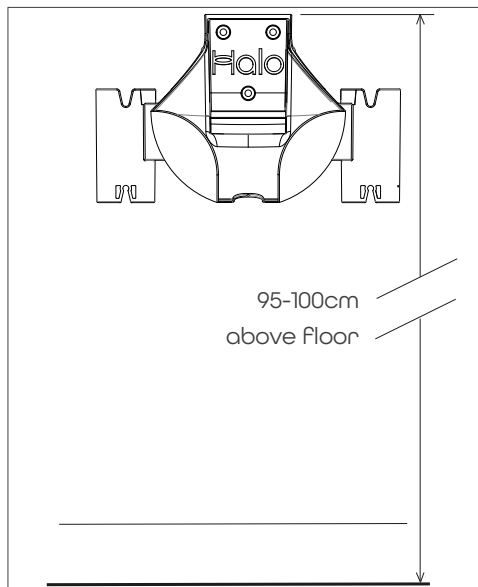


2. For convenience the charging cable can be attached for easy connection. The cable should be pushed into the grip features to secure.

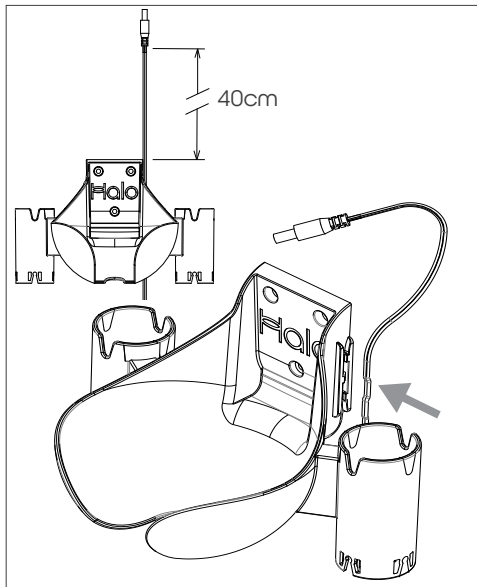

3. The Capsule Vacuum and up to 4 accessories can then be held by the Wall Dock.

Ensure the Wall Dock is secure to the wall before use. Periodically check it has not become loose over time.

Capule **MUST** have the Extension Tube connected in order to be secure in the Wall Dock.

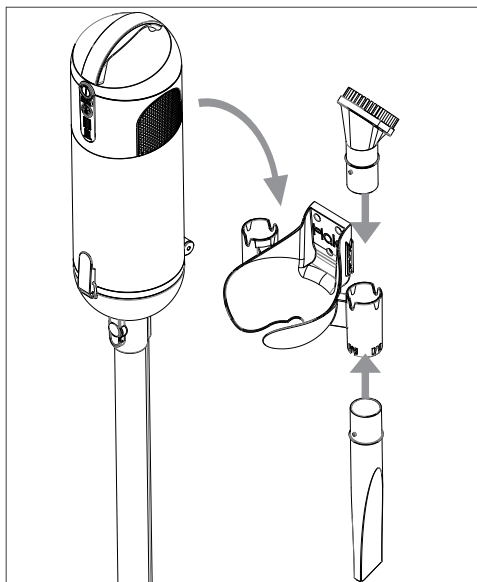



Halo Appliances Ltd.
Warwickshire, England

capsuleclean.com/contact